



Loading Data Base Disks

DTU Floppy Disk Drive Procedure (or SSDTU with SCN 602/702 and earlier)

1. Press the DATA key for DATA page 1/4.

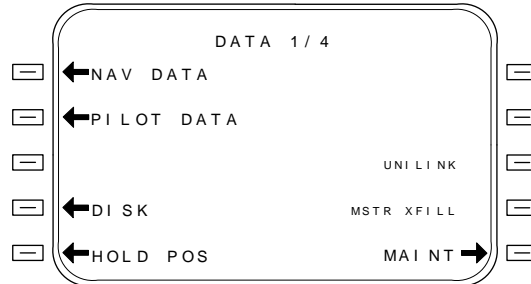


2. Press the DISK line select key for the DISK MENU page.

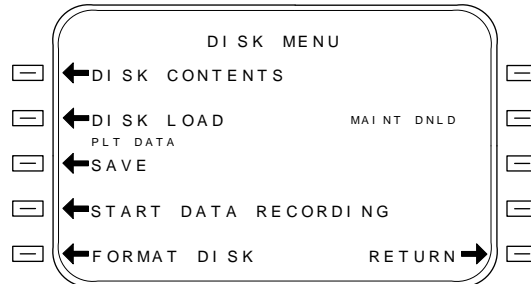


3. Press the ON key on the DTU if it is not already powered up. A 12 second self test will occur.
4. When the self test is complete, insert Standard Disk 1 of 1 into the DTU.
5. Press the DISK LOAD line select key for the DISK LOAD page.

Note: On multiple FMS installations, when FMSs are synchronized to this page, the data base will be loaded into all FMSs.

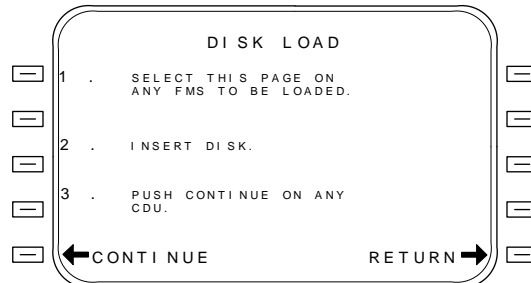

6. Press the CONTINUE line select key (for multiple FMS installations, press the CONTINUE line select key on only one FMS; the others will also respond). The screen below will appear.

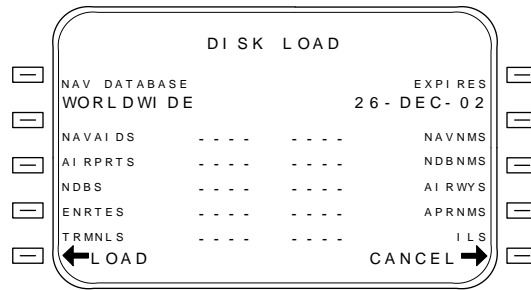


- Press the LOAD line select key. The screen below will appear as the FMS clears memory for the loading process.


Note: Do not disturb the DTU or the FMS while the update is in progress.

Note: Should an error that would prevent successful completion of the load occur, a message will appear on the DISK LOAD page.


CAUTION: PRESSING THE CANCEL LINE SELECT KEY AT ANY TIME WILL ABORT THE DATA BASE LOAD. THIS ACTION WILL ERASE THE NAV DATA BASE.

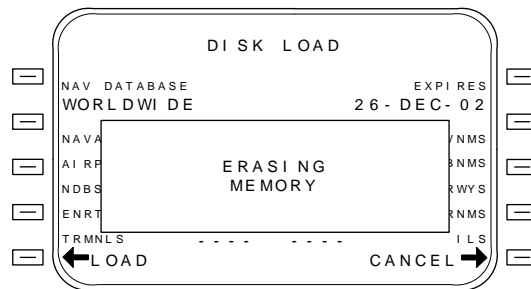

After the FMS has cleared memory, it will start loading the new data base. As each field completes loading, RCVD will appear next to it. When all data from the Standard Disk is received, the FMS will test the data for corruption. When testing is complete, the following screen will appear.

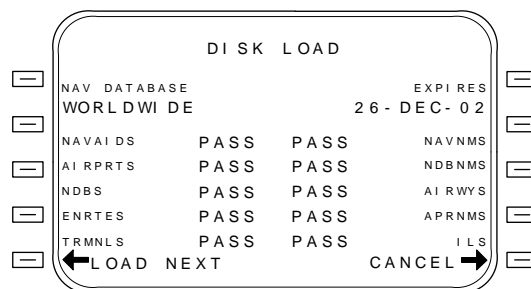

- Press the LOAD NEXT line select key.
- Insert the first Extended disk. The FMS will interrogate the disk and display a screen similar to the one shown below.

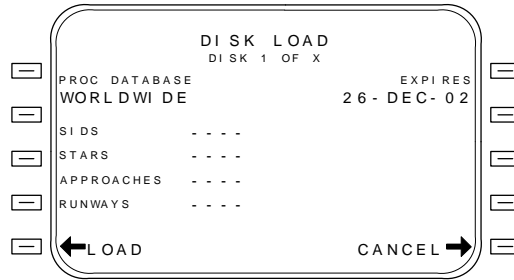


Press the LOAD line select key.

Note: The digit shown above as X will be the number of disks in the Extended disk set. This number will vary from set to set.

After the data from a disk in the set is loaded, the FMS will prompt for the loading of the next disk at line select key 5L.

When the data from all the disks in the Extended set is loaded and tested, a screen similar to the following will appear.

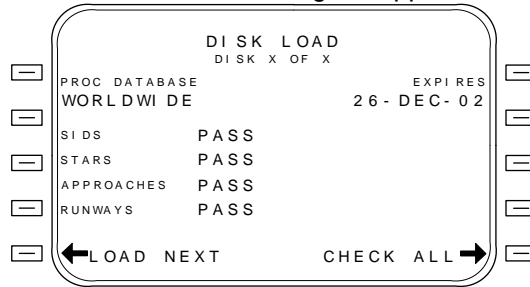

If applicable, press the LOAD NEXT line select key to load the Company Routes data base. Otherwise, proceed as follows.

Note: If disks are loaded prior to their effective date or after their expiration date, the CHECK ALL line select key option described below will not appear. Instead, the line select key will read RETURN.

10. Press the CHECK ALL line select key if this option is displayed. This action will cause the loaded data base to become the active data base.

If the CHECK ALL option is not displayed, press the RETURN line select key to return to the DISK MENU page.